





## INSTALLATION INSTRUCTIONS

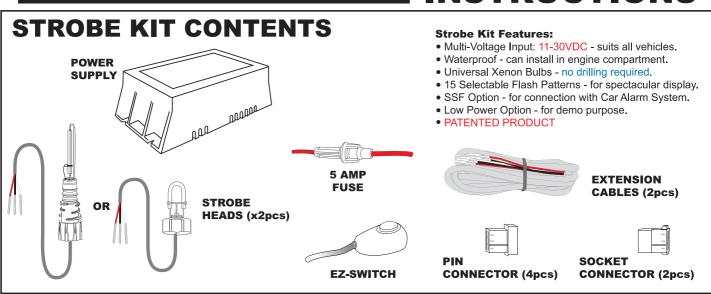

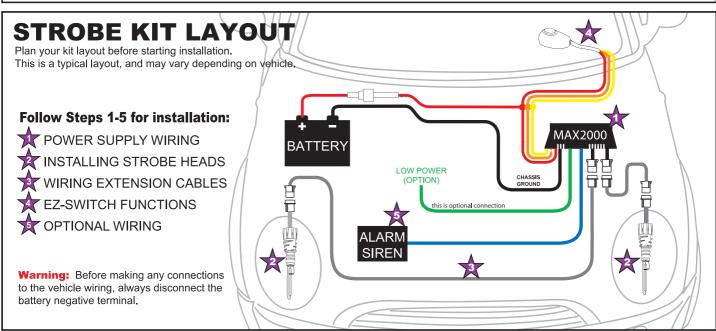


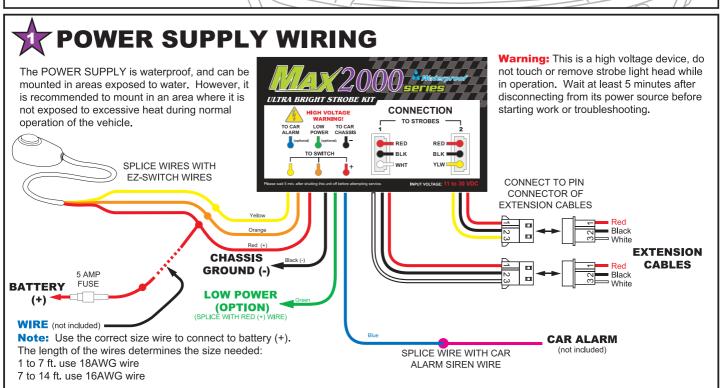


## NSTALLING STROBE HEADS The STROBE HEADS can be easily installed in the auxiliary lights by removing the existing bulbs. AUXLILARY LIGHT SCREW

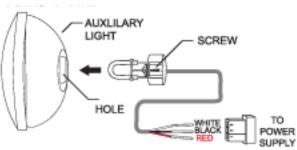

- 1. Remove the existing bulb from the housing, if needed
- 2. Push strobe bulb into the hole
- 3. Secure the strobe bulb with a screw
- 4. Terminate the wires into the AMP connector

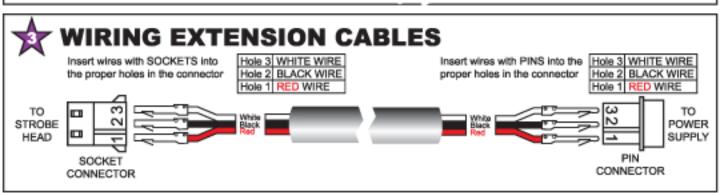

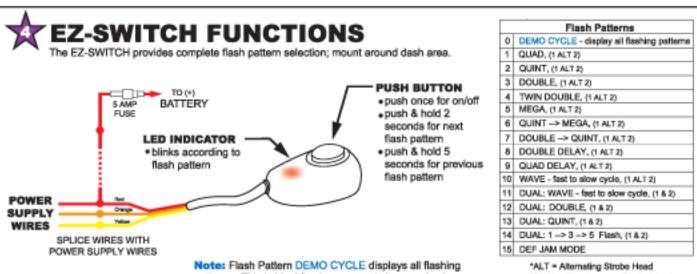


patterns. This is ideal for demo cars at shows or in showrooms.


\*DUAL = Simultaneous Strobe Head



The Smart Security Function allow the strobe kit to be synchronized with the car alarm. When the alarm is triggered, the ultra bright strobes will flash; creating an immense warning effect. The strobes can also be activated via the 'seek/panic' button for car search in big parking lots.

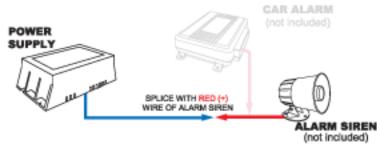

The LOW POWER function is used to decrease brightness of the strobes. This is useful for demo cars in display at shows or in showrooms where it might not be possible to strobe at full brightness.

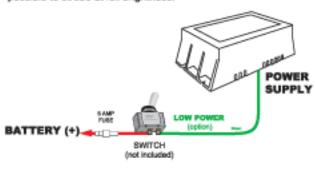

SPLICE GREEN WIRE WITH RED (+) WIRE FOR LOW POWER. OR INSTALL A SWITCH TO TURN ON (low power) & OFF (high power).

LOCATE RED (+) WIRE OF ALARM SIREN, AND SPLICE IT WITH BLUE WIRE OF POWER SUPPLY.